



WATER KITS SUPPLY

ZT Pyrène Aéro Pôle - Téléport 3 - 65290 Juillan – France

Tél : + 33 5 62 95 17 94 Fax: + 33 5 62 95 34 27 Email : contact@water-kits.fr

IRON TEST ON FABRIC

Add a few drops of reagent **FER/IRON 1** on the fabric to be tested, then add the **FER/IRON SPOT TESTER** reagent and wait 30 seconds :




None / very low
Iron presence

No action required



Medium
Iron presence

Control regularly

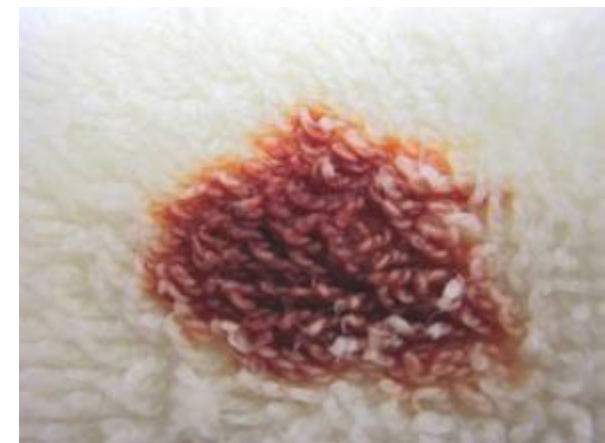

High
Iron presence

Action required