



SARL WATER KITS SUPPLY

ZT Pyrène Aéro Pôle Téléport 3 - 65290 Juillan - FRANCE

Tél : 05 62 95 17 94 Fax : 05 62 95 34 27

Email: contact@water-kits.fr

Web: www.water-kits.fr

Chlorine test on fabric :

Add 2 drops of Rincage n°2 on wet fabric

If the colour is brown : chlorine is present

If colourless : no chlorine is present

Presence of Peroxide or Bisulphite

Add 2 drops of Rincage n°3 on wet fabric

If the colour remains pink : No Peroxide and no Bisulphite are present

If colourless : add 2 drops of rincage n°2

If the colour is brown : Peroxide is present

If still colourless : Bisulphite is present



WATER KITS SUPPLY

ZT Pyrène Aéro Pôle - Téléport 3 - 65290 Juillan – France

Tél : + 33 5 62 95 17 94 Fax: + 33 5 62 95 34 27 Email : contact@water-kits.fr

IRON TEST ON FABRIC

Add a few drops of reagent **FER/IRON 1** on the fabric to be tested, then add the **FER/IRON SPOT TESTER** reagent and wait 30 seconds :



None / very low
Iron presence

No action required



Medium
Iron presence

Control regularly



High
Iron presence

Action required



WATER KITS SUPPLY

ZT Pyrène Aéro Pôle - Téléport 3 - 65290 Juillan – France


Tél : + 33 5 62 95 17 94 Fax: + 33 5 62 95 34 27 Email : contact@water-kits.fr

pH ON FABRIC


Add a few drops of Universal pH indicator on the fabric to be tested, wait 10 seconds and compare with the color card supplied.



pH 4 : Too low

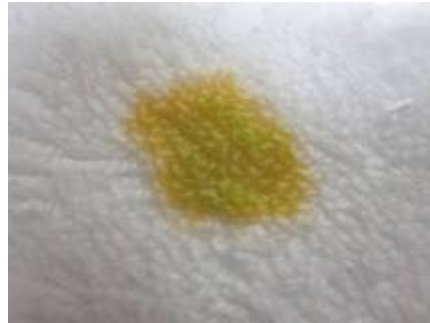

pH 6 – 6,5 : Correct pH

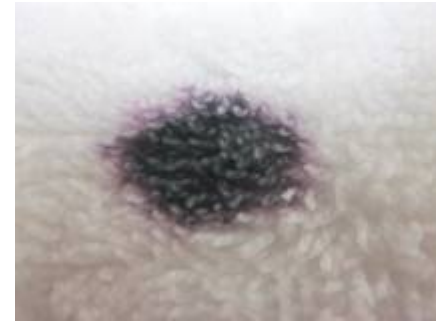

pH 10 : Too high

